

STOP&GO connected kit and automatic resetting



4 149 54



4 062 88


Pack	Cat.Nos	Connected STOP&GO (remote control resetting)				
1	4 149 54	<p>For remotely switching (via a smartphone or tablet) 1 module per pole RCCBs and RCBOs up to 63 A. Examples of use:</p> <ul style="list-style-type: none"> - In the event of unwanted tripping (generated by temporarily electrical disturbances or other external events) the Connected STOP&GO will do an automatic checking of the installation. If no permanent fault is detected: it will send a message on the smartphone or tablet of the user in order to get an authorization to switch on the associated device. - In case of permanent fault: the user will be informed about it without having the possibility to remotely switch on the power. - Needs a permanent internet connection via a Wi-Fi modem/router (powered by an UPS) in order to send messages to the user and allow him to remotely control the circuit. - In a normal situation, to remotely switch ON a circuit (like the electrical heating in a holiday house). Can take one control auxiliary and one signalling auxiliary. The signalling auxiliary must be placed between the STOP&GO and the control auxiliary. No tool required for assembling. <p>Kit comprising:</p> <ul style="list-style-type: none"> - 1 Connected STOP&GO (non-automatic) - 1 IP gateway (Wi-Fi connection) - 1 power supply module, input voltage 230 V~/ output voltage 12 V= - 2 communication cables <table border="1"> <thead> <tr> <th>Control voltage</th> <th>No. of modules</th> </tr> </thead> <tbody> <tr> <td>230 V~</td> <td>4</td> </tr> </tbody> </table>	Control voltage	No. of modules	230 V~	4
Control voltage	No. of modules					
230 V~	4					

Pack	Cat.Nos	STOP&GO automatic resetting				
1	4 062 88	<p>For automatic resetting of 1 module per pole RCCBs and RCBOs up to 63 A. STOP&GO is used in the event of unwanted tripping generated by temporarily electrical disturbances or other external events. Can take one control auxiliary and one signalling auxiliary. The signalling auxiliary must be placed between the STOP&GO and the control auxiliary. No tool required for assembling.</p> <p>Automatic resetting function</p> <table border="1"> <thead> <tr> <th>Control voltage</th> <th>No. of modules</th> </tr> </thead> <tbody> <tr> <td>230 V~</td> <td>2</td> </tr> </tbody> </table>	Control voltage	No. of modules	230 V~	2
Control voltage	No. of modules					
230 V~	2					
1	4 062 89	<p>Automatic resetting + periodic self-test function</p> <table border="1"> <thead> <tr> <th>Control voltage</th> <th>No. of modules</th> </tr> </thead> <tbody> <tr> <td>230 V~</td> <td>2</td> </tr> </tbody> </table>	Control voltage	No. of modules	230 V~	2
Control voltage	No. of modules					
230 V~	2					

Manual supply inverter DX³ and accessories




4 063 14

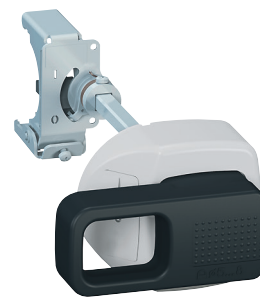

4 063 19



Pack	Cat.Nos	Manual supply inverter (MSI)
1	4 063 14	For manually switching between the mains and an alternative power supply. Allow to restore power on pre-designated and/or critical circuits in case of a power failure of the main supply.
1	4 063 15	For 2P 2-module devices
1	4 063 16	For 3P 3-module devices
		For 4P 4-module devices
		Front external rotary handles
		Allow the manual control (open/close) of a modular device without opening the enclosure
		For all DX ³ , TX ³ and RX ³ devices from 2P upwards
		Supplied with bracket, connection rod, handle, self-adhesive drilling template and connection accessories
		Installation principle - see e-catalogue
1	4 063 19	Black handle
1	4 063 20	Yellow and red handle
		Wiring management accessories
		Insulating shields
1	4 063 05	For 1 module per pole MCBs
		For separation between the terminals of the MCB, when using high cross section cables
		Spacing unit with feedthrough
10	4 063 07	0.5 module
		Allows cables to run between two modular devices and creates an air channel in order to limit temperature rise
		Terminals for aluminium cables
1	4 063 10	For 1 and 1.5 module/pole MCBs up to 63 A
1	4 063 11	For 1.5 module/pole MCBs and remote trip isolating switches from 80 A to 125 A
		Safety and maintenance accessories
		Sealable screw covers
2	4 063 04	For 1 module per pole MCBs (set of 4)
1	4 063 12	For 1.5 module per pole MCBs (set of 4)
		Terminal shield
1	4 063 06	For 1.5 module/pole MCBs (set of 2)
		Padlocking
		To lock the handle of a modular device during maintenance
1	0 227 97	Large padlock, Ø6 mm, 50 mm length
		Supplied with two keys and labels
3	4 063 13	Small padlock, Ø5 mm
2	4 063 03	Support for one padlock (for small or large model)
		For locking the handle of the modular devices (MCBs, RCCBs, RCBOs or isolating switches) in OFF position

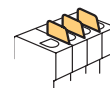

Voltage surge protectors
p. 66-70

Keor UPS
p. 678

Dimensions of din-rail equipment

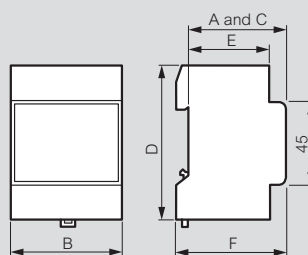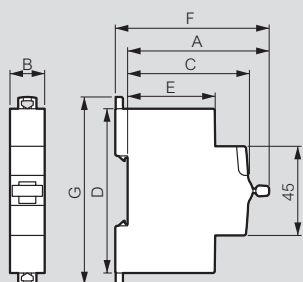

Product	A		B				C	D	E	F	G
	1P	1P+ N	2P	3P	4P						
RX³ MCBs	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
RX³ RCCBs	71.7			35.6		71.2	61	83	44	77.8	88.9
TX³ MCBs	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
TX³ RCCBs	71.7			35.6		71.2	61	83	44	77.8	88.9
Isolating switches DX³	71.7	17.8		17.8/ 35.4	35.6/ 53.1	70.8	61	83	44	77.8	94.8
Remote trip head isolating switches DX³ up to 63A - 1 mod/pole	71.7			35.4	53.1	70.8	61	83	44	77.9	94.8
Remote trip head isolating switches DX³ 100/125A - 1.5 mod/pole	73				80.1	106.8	61	96	47	79	104.3
DX³ RCCBs	71.7			35.6		71.2	61	83	44	77.8	94.8
1P DX³ RCBOs (up to 45A)	68	17.7					60	115	48	74	126.8
1P+N DX³ RCBOs (up to 40A) & 4P (up to 32A)	71.7		35.6			71.2	61	83	44	77.8	94.8
2P & 4P DX³ RCBOs (40A to 63A)	72			71.2		124.6	61	96	44	78.2	107.8
1P+N DX³ MCBs 1 mod	71.7		17.8				61	83	44	77.8	94.8
DX³ MCBs - 1 mod/pole	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	94.8
DX³ MCBs - 1,5 mod/pole	73.1	26.7		53.4	80.1	106.8	61	100	47	79	104.3
DX³ add-on modules up to 63A - 1 mod/pole	72			35.6	53.4	53.4	61	96	44	78.2	107.8
DX³ add-on modules up to 63A - 1.5 mod/pole	72			35.6	53.4	53.4	61	96	47	78.2	116.7
DX³ add-on modules 80 to 125A - 1.5 mod/pole	72			71.2	106.8	106.8	61	114	47	78.2	129
DX³ auxiliaries	71.5			8.8 / 17.7			61	83	44	77.7	84.5
DX³ remote control	74.3			17.7 / 35.4			61	83	44	80.5	98.8
DX³ Stop&Go automatic resetting	74.3			35.4			61	83	44	80.5	113.7
Change-over switches	68	17.7		35.6			60	83	44	74	94
CX³ latching relays	64	17.8		17.8	35.6	35.6	61	84.5	44	70.2	94.8
CX³ contactors up to 25A	66.3/ 61	17.8		17.8	35.6	35.6	61	84.5	44	72.6/ 67.3	94.8
CX³ contactors 40A & 63A	62			35.6	53.4	53.4	60	83	44	68	94
Auxiliaries for CX³ contactors and latching relays	61			9/17.8			61	84.5	44	67	84.5
Push-buttons / control switches	68			17.7			60	83	44	74	94
Indicators	68			17.7			60	83	44	69	94
Bells and buzzers	60			17.7			60	76	44	66	85
Light sensitive switches											
Cat.Nos 0 037 21, 4 126 23	60			35.6			60	85	37.5	66	70
Socket outlets	60			44.5			60	83	44	66	92
Time delay relays	60			17.7			60	83	44	66	94
Remote control dimmers											
Cat.No 0 036 58	60			36			60	83	44	66	94
Cat.No 0 036 60	60			72			60	83	44	66	94
Cat.No 0 036 71	60			108			60	83	44	66	94

Description	A	B	C	D	E	F
Programmable time switches						
0 037 05	60	17.8	60	83	44	66
4 127 80/90/94	60	17.8	60	83	44	66
4 127 95, 4 128 12/13	60	53	60	83	44	66
4 126 31/33/41	60	35.6	60	83	44	66
4 126 54/57	60	35.6	60	83	44	66
0 047 70	60	90	60	83	44	66
Transformers and power supplies						
0 042 10/30/31	60	72	60	83	44	66
4 130 91	60	35.8	60	83.5	44	66
4 130 92/93/96	60	71.5	60	83.5	44	66
4 130 98	60	89	60	94	44	66
0 047 91/92	60	105	60	95	44	66
4 131 05/06/07/08	60	89	60	95	44	66
0 047 93	60	70	60	95	44	66
Residual current relay						
0 260 88	60	35.5	60	89	44	66

Elément d'espacement passe-fil

Référence(s) : 406 307



SOMMAIRE	PAGES
1. Description, utilisation	1
2. Gamme.....	1
3. Cotes d'encombrement.....	1
4. Mise en situation.....	2
5. Caractéristiques générales	2
6. Conformités	2


1. DESCRIPTION - UTILISATION

- . Elément d'espacement passe-fil.
- . Intercalé entre deux produits, permet d'en limiter l'échauffement et d'éviter l'application de déclassements (voir dans les fiches techniques des produits utilisés)
- . Permet de faire passer des câbles entre deux produits et de faciliter ainsi la maintenance en évitant le passage de ces câbles au dessus des peignes de raccordement.

2. GAMME

- . 0,5 module de large (8,8 mm)
- . Référence 406 307 : livré par dix.

3. COTES D'ENCOMBREMENT (en mm)

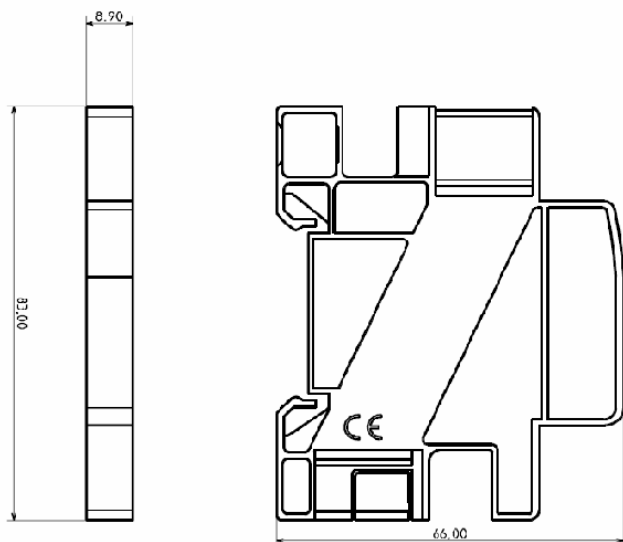

4. MISE EN SITUATION

Mise en situation :

- . Sur rail symétrique EN/IEC 60715 ou DIN 35.

Positionnements de fonctionnement :

- . Vertical, Horizontal, à l'envers et à Plat.



Utilisation en passe-fil :

- . Capacité maxi en câble souple : 2 câbles de 16mm², ou 3 câbles de 10mm², ou 4 câbles de 6mm².



4. MISE EN SITUATION *(suite)*


Outils nécessaires :

. Aucun.

5. CARACTERISTIQUES GENERALES

Marquage face avant :

. Par tampographie ineffaçable :

- Référence du produit et logotype 



Température ambiante de fonctionnement et de stockage :

. Min. = -40 °C. Max. = +70 °C

Matière de l'enveloppe :

. Polycarbonate

. tenue au fil incandescent à 750 °C selon norme NF EN 60 695-2-11

Poids moyen :

. 11 g (1 produit seul)

. 146 g (10 produit emballés)

Volume emballée :

Emballé par dix pièces

. 1 dm³

6. CONFORMITES

. Ce produit ne fait pas l'objet d'une norme particulière.