

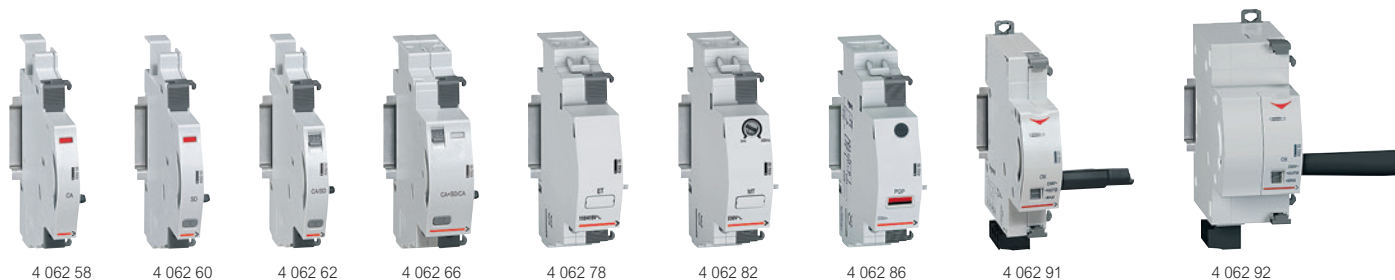


# Signalling, remote tripping auxiliaries and motorised controls DX<sup>3</sup>

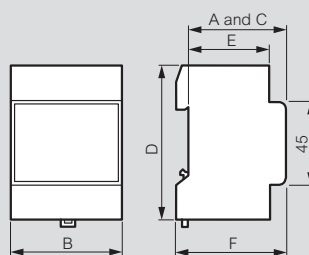

Pack	Cat.Nos	Signalling auxiliaries prong busbar adapted	Pack	Cat.Nos	Remote tripping auxiliaries								
1	4 062 58	<p>To fit on the left-hand side of DX<sup>3</sup> and TX<sup>3</sup> devices Maximum number of auxiliaries per device: - 3 signalling auxiliaries or - 2 signalling auxiliaries + 1 remote tripping auxiliary Allow insertion of the supply busbar, top side No tool required for joining together the auxiliary and the main device.</p> <p><b>Auxiliary contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, isolating switches or remote trip isolating switches Indicates the position of the contacts of its associated device.</p>	0.5	1	4 062 76	<p>To fit on the left-hand side of DX<sup>3</sup> and TX<sup>3</sup> devices Maximum 1 remote tripping auxiliary per device Allow insertion of the supply busbar No tool required for joining together the auxiliary and the main device. For MCBs, RCBOs, RCCBs and remote trip isolating switches</p> <p><b>Current shunt trips</b> For remote tripping of its associated device via a N/O push button</p>	1						
1	4 062 60	<p><b>Fault signalling contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, Indicates the fault tripping of its associated device</p>	0.5	1	4 062 78	<p><b>Undervoltage releases</b> For remote tripping of its associated device in case of mains voltage drop down or with the help of a N/C push button</p>	1						
1	4 062 62	<p><b>Auxiliary or fault signalling contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs Allows the choice between the two functions</p>	0.5	1	4 062 80	<p>24 to 48 V~/=</p>	1						
1	4 062 66	<p><b>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs</p>	1	1	4 062 82	<p>230 V~</p>	1						
		<p><b>Signalling auxiliaries fork busbar adapted</b> To fit on the left-hand side of DX<sup>3</sup> and TX<sup>3</sup> devices Maximum number of auxiliaries per device: - 3 signalling auxiliaries or - 2 signalling auxiliaries + 1 remote tripping auxiliary Allow insertion of supply busbar, bottom side No tool required for joining together the auxiliary and the main device.</p>				<p><b>Power overvoltage protection (POP)</b> Protects the circuit by tripping its associated device in case of overvoltage between phase and neutral. Tripping threshold : 275 V (eg. in case of neutral failure)</p>							
1	4 062 50	<p><b>Auxiliary contact</b> 6 A - 250 V~(changeover switch) For MCBs, RCBOs, RCCBs, isolating switch or remote trip isolating switch Indicates the position of the contacts of its associated device</p>	0.5	1	4 062 86	<p><b>Autonomous shunt trip for N/C push-button</b> 230 V~ For remote tripping with positive security on a control circuit via a N/C push-button or emergency stop. Does not trigger its associated device in case of mains power failure (the trigger occurs only after a deliberate action of a N/C push-button). Supplied with battery Minimum working reserve : 60 hours (for remote tripping even if there is no supply voltage)</p>	1.5						
1	4 062 52	<p><b>Fault signalling contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, Indicates the fault tripping of its associated device</p>	0.5	1	4 062 87	<p>Spare battery for autonomous shunt trip Cat.No 4 062 87</p>							
1	4 062 56	<p><b>Auxiliary or fault signalling contact</b> 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs Allows the choice between the two functions</p>	0.5			<p><b>Motorised controls</b> For remote control (opening and closing) of their associated device. To fit on the left-hand side of DX<sup>3</sup> and TX<sup>3</sup> devices For MCBs, RCBOs, RCCBs and remote trip isolating switches (from 1P to 4P) Can take one control auxiliary and one signalling auxiliary. No tool required for joining together the motorised control and the main device</p>							
1	4 062 59	<p><b>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact</b> 6 A - 250 V~ (changeover switch) For DX<sup>3</sup>-ID RCCBs B type Cat.No 4 118 42/43/44/45/46/47/48/49 (p. 51) Allows the choice between the two functions</p>	0.5	1	4 062 90	<p><b>ON/OFF function - for 1 module / pole devices (In up to 63 A)</b></p> <table border="1"> <tr> <td>Control voltage</td> <td>Number of modules</td> </tr> <tr> <td>24-48 V~/=</td> <td>1</td> </tr> <tr> <td>230 V~</td> <td>1</td> </tr> </table>	Control voltage	Number of modules	24-48 V~/=	1	230 V~	1	
Control voltage	Number of modules												
24-48 V~/=	1												
230 V~	1												
1	4 062 64	<p><b>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact</b> 6 A - 250 V~ (changeover switch) For MCB, RCBOs, RCCBs</p>	1	1	4 062 91	<p><b>ON/OFF function - for 1.5 module / pole devices (In up to 125 A) from 2P to 4P</b></p> <table border="1"> <tr> <td>230 V~</td> <td>2</td> </tr> </table>	230 V~	2					
230 V~	2												
1				1	4 062 92	<p><b>ON/OFF + automatic resetting function - for 1 module / pole devices (In up to 63 A)</b> Automatically resets the device to which it is associated, thus ensuring continuity of service</p> <table border="1"> <tr> <td>24-48 V~/=</td> <td>2</td> </tr> <tr> <td>230 V~</td> <td>2</td> </tr> </table>	24-48 V~/=	2	230 V~	2			
24-48 V~/=	2												
230 V~	2												

## Dimensions of din-rail equipment

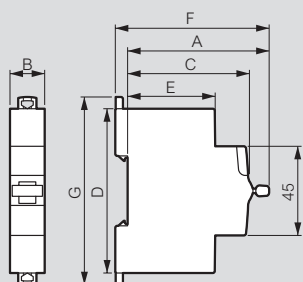

Product	A		B				C	D	E	F	G
	1P	1P+ N	2P	3P	4P						
<b>RX<sup>3</sup> MCBs</b>	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
<b>RX<sup>3</sup> RCCBs</b>	71.7			35.6		71.2	61	83	44	77.8	88.9
<b>TX<sup>3</sup> MCBs</b>	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
<b>TX<sup>3</sup> RCCBs</b>	71.7			35.6		71.2	61	83	44	77.8	88.9
<b>Isolating switches DX<sup>3</sup></b>	71.7	17.8		17.8/ 35.4	35.6/ 53.1	70.8	61	83	44	77.8	94.8
<b>Remote trip head isolating switches DX<sup>3</sup> up to 63A - 1 mod/pole</b>	71.7			35.4	53.1	70.8	61	83	44	77.9	94.8
<b>Remote trip head isolating switches DX<sup>3</sup> 100/125A - 1.5 mod/pole</b>	73				80.1	106.8	61	96	47	79	104.3
<b>DX<sup>3</sup> RCCBs</b>	71.7			35.6		71.2	61	83	44	77.8	94.8
<b>1P DX<sup>3</sup> RCBOs (up to 45A)</b>	68	17.7					60	115	48	74	126.8
<b>1P+N DX<sup>3</sup> RCBOs (up to 40A) &amp; 4P (up to 32A)</b>	71.7		35.6			71.2	61	83	44	77.8	94.8
<b>2P &amp; 4P DX<sup>3</sup> RCBOs (40A to 63A)</b>	72			71.2		124.6	61	96	44	78.2	107.8
<b>1P+N DX<sup>3</sup> MCBs 1 mod</b>	71.7		17.8				61	83	44	77.8	94.8
<b>DX<sup>3</sup> MCBs - 1 mod/pole</b>	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	94.8
<b>DX<sup>3</sup> MCBs - 1,5 mod/pole</b>	73.1	26.7		53.4	80.1	106.8	61	100	47	79	104.3
<b>DX<sup>3</sup> add-on modules up to 63A - 1 mod/pole</b>	72			35.6	53.4	53.4	61	96	44	78.2	107.8
<b>DX<sup>3</sup> add-on modules up to 63A - 1.5 mod/pole</b>	72			35.6	53.4	53.4	61	96	47	78.2	116.7
<b>DX<sup>3</sup> add-on modules 80 to 125A - 1.5 mod/pole</b>	72			71.2	106.8	106.8	61	114	47	78.2	129
<b>DX<sup>3</sup> auxiliaries</b>	71.5			8.8 / 17.7			61	83	44	77.7	84.5
<b>DX<sup>3</sup> remote control</b>	74.3			17.7 / 35.4			61	83	44	80.5	98.8
<b>DX<sup>3</sup> Stop&amp;Go automatic resetting</b>	74.3			35.4			61	83	44	80.5	113.7
<b>Change-over switches</b>	68	17.7		35.6			60	83	44	74	94
<b>CX<sup>3</sup> latching relays</b>	64	17.8		17.8	35.6	35.6	61	84.5	44	70.2	94.8
<b>CX<sup>3</sup> contactors up to 25A</b>	66.3/ 61	17.8		17.8	35.6	35.6	61	84.5	44	72.6/ 67.3	94.8
<b>CX<sup>3</sup> contactors 40A &amp; 63A</b>	62			35.6	53.4	53.4	60	83	44	68	94
<b>Auxiliaries for CX<sup>3</sup> contactors and latching relays</b>	61			9/17.8			61	84.5	44	67	84.5
<b>Push-buttons / control switches</b>	68			17.7			60	83	44	74	94
<b>Indicators</b>	68			17.7			60	83	44	69	94
<b>Bells and buzzers</b>	60			17.7			60	76	44	66	85
<b>Light sensitive switches</b>											
<b>Cat.Nos 0 037 21, 4 126 23</b>	60			35.6			60	85	37.5	66	70
<b>Socket outlets</b>	60			44.5			60	83	44	66	92
<b>Time delay relays</b>	60			17.7			60	83	44	66	94
<b>Remote control dimmers</b>											
<b>Cat.No 0 036 58</b>	60			36			60	83	44	66	94
<b>Cat.No 0 036 60</b>	60			72			60	83	44	66	94
<b>Cat.No 0 036 71</b>	60			108			60	83	44	66	94

Description	A	B	C	D	E	F
<b>Programmable time switches</b>						
<b>0 037 05</b>	60	17.8	60	83	44	66
<b>4 127 80/90/94</b>	60	17.8	60	83	44	66
<b>4 127 95, 4 128 12/13</b>	60	53	60	83	44	66
<b>4 126 31/33/41</b>	60	35.6	60	83	44	66
<b>4 126 54/57</b>	60	35.6	60	83	44	66
<b>0 047 70</b>	60	90	60	83	44	66
<b>Transformers and power supplies</b>						
<b>0 042 10/30/31</b>	60	72	60	83	44	66
<b>4 130 91</b>	60	35.8	60	83.5	44	66
<b>4 130 92/93/96</b>	60	71.5	60	83.5	44	66
<b>4 130 98</b>	60	89	60	94	44	66
<b>0 047 91/92</b>	60	105	60	95	44	66
<b>4 131 05/06/07/08</b>	60	89	60	95	44	66
<b>0 047 93</b>	60	70	60	95	44	66
<b>Residual current relay</b>						
<b>0 260 88</b>	60	35.5	60	89	44	66

## DX<sup>3</sup> Undervoltage release (MT)

Cat. N°(s): 4 062 80, 82




CONTENTS	PAGE
1. Description - Use .....	1
2. Range.....	1
3. Overall dimensions .....	1
4. Preparation - Connection .....	2
5. General Characteristics .....	3
6. Compliance and approvals.....	4

### 1. DESCRIPTION - USE

- . Undervoltage release (MT): enable the remote tripping of the associated device.
- . This device is equipped by a time delay adjustable from 0 to 300ms to avoid unwanted tripping due to voltage dips of the supply

#### Symbol:

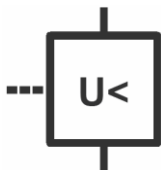


### 2. RANGE

- . Cat n° 406 280 : 24 and 48 V ~/= (a.c. / d.c.).
- . Cat n° 406 282 : 230 V ~ (a.c.).

### 3. OVERALL DIMENSIONS

1 module width.

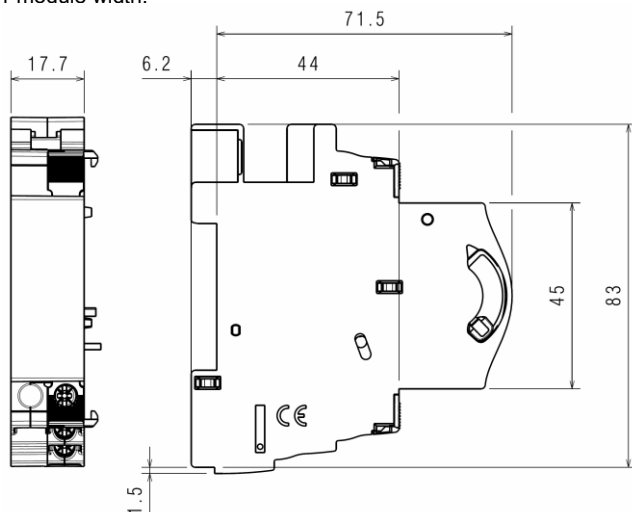


### 4. PREPARATION CONNECTION

#### Fixing:

- . On symmetric EN/IEC 60715 or DIN 35 rail, by the device which is associated.

#### Operating positions:

- . Vertical    Horizontal    Upside down    On the side



#### Power Supply:

- . Only from the bottom.

#### Terminals:

- . Terminal depth: 8 mm.
- . Stripping length: 8 mm

#### Screw head:

- . Mixed, slotted and Pozidriv n°1 (UNI7596 type Z1).

#### Recommended tightening torque:

- . 1 Nm.

#### Recommended tools:

- . For the terminals: Pozidriv n°1 or flat screwdriver 4 mm.
- . For the adjustment pawl of the timer: flat screwdriver 4 mm.

#### Conductor type:

	Copper cable	
	Without ferrule	With ferrule
Rigid Cable	1 x 0,5 mm <sup>2</sup> to 1,5 mm <sup>2</sup> 2 x 1,5 mm <sup>2</sup>	-
Flexible Cable	1 x 0,5 mm <sup>2</sup> to 1,5 mm <sup>2</sup> 2 x 1,5 mm <sup>2</sup>	1 x 0,5 mm <sup>2</sup> to 1,5 mm <sup>2</sup> 2 x 1,5 mm <sup>2</sup>

#### Manual action of the MT:

- . By the handle of the associated device, for reset the release.


## 4. PREPARATION –CONNECTION (continued)

### Display of Undervoltage release state:

- By mechanical indicator on front face:
  - red: indicates the tripping of the device by the coil.
  - transparent: the undervoltage release is in ON position (armed position, ready for tripping).

### Assembling:

- On the left side of Legrand MCB, IS, RCBO or RCCB and isolating switches equipped or not with signalling auxiliaries
- No tool required. Clipped by mean of plastic clamps on the associated device.
- Assembling products in OFF position
- The switching device of the shunt release must be positioned above of the handle of the associated device or the signalling auxiliary.

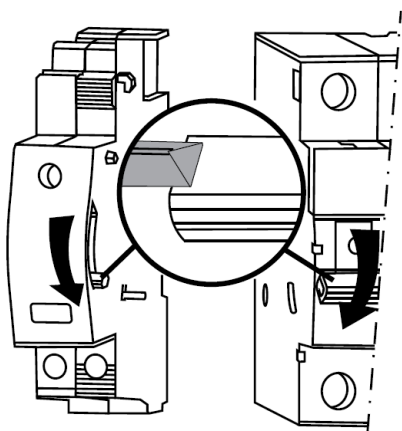

### List of allowed associations (General rules):

- Three auxiliaries maximum which:
  - two signalling auxiliaries (Cat. n°(s) 4 062 50, 52, 56, 58, 60, 62, 64, 66).
  - Only one control auxiliary (Cat. n°(s) 4 062 76, 78, 80, 82, 84).
- If signalling and control auxiliaries are associated on the same circuit breaker, the command auxiliary must be placed to the left of the signal auxiliary (ref. 4 062 5x / 6x).
- For devices 1,5 modules per pole width:
  - If a Remote tripping auxiliary is already mounted on this kind of device, under-voltage releases (4 062 80/82) then only 1 module signalling auxiliaries can be added (auxiliary + fault signalling contact or auxiliary contact + auxiliary contact 4 062 64 / 66). In this set up the ½ module signalling auxiliaries will not operate.
  - Nothing changes for the other modular references.

### List of allowed associations (Particular rules):

- With an isolating switch DX-IS:
  - only one signalling auxiliary CA type (Cat. n°(s) 4 062 50, 58 64, 66).
- With a remote trip head isolating switch DX-IS, three auxiliaries maximum which:
  - one or two signalling auxiliaries CA type (Cat. n°(s) 4 062 50, 58 64, 66).
  - one control auxiliary cat n°(s) 4 062 7x / 8x.
- With a MCB, IS, RCBO,RCCB three auxiliaries maximum which:
  - one or two signalling auxiliaries, CA or SD type (Cat. n°(s) 4 062 50, 52, 56, 58, 60, 62, 64, 66).
  - one control auxiliary Cat. n°(s) 4 062 7x / 8x.

## 4. PREPARATION –CONNECTION (continued)

### Combination tables of the auxiliaries:

For devices 1 module per pole width:


		4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87	
	4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 76 / 78 / 80 / 82 / 84 / 86 / 87	4 062 .. 50 / 52 / 56 / 58 / 60 / 62	
	4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87	4 062 .. 64 / 66	
4 062 .. 76 / 78 / 80 / 82 / 84 / 86 / 87	4 062 .. 50 / 52 / 56 / 58 / 60 / 62	4 062 .. 50 / 52 / 56 / 58 / 60 / 62	
	4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66	4 062 .. 64 / 66	

For devices 1,5 modules per pole width:

		4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87	
	4 062 .. 50 / 52 / 56 / 58 / 60 / 62	4 062 .. 50 / 52 / 56 / 58 / 60 / 62	
	4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87	4 062 .. 64 / 66	
4 062 .. 76 / 78 / 80 / 82 / 84 / 86 / 87	4 062 .. 64 / 66	4 062 .. 64 / 66	

### Wiring diagrams:


Cat. n° 4 062 80.

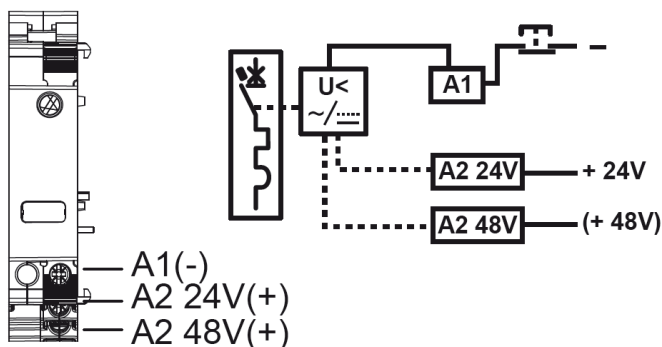

## 4. PREPARATION –CONNECTION (continued)

### Wiring diagrams: (continued)

. Cat. n° 4 062 82.

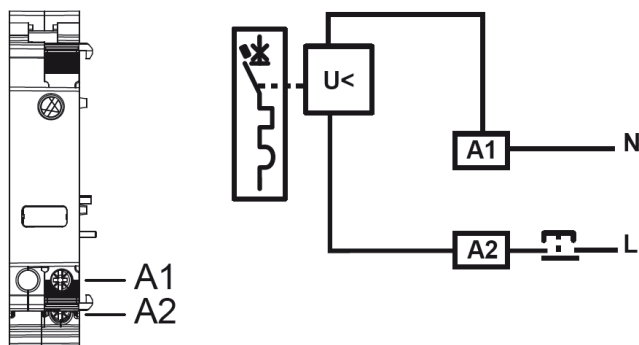


## 5. GENERAL CHARACTERISTICS

### Front side marking:

. By permanent ink pad printing:

Cat. n° 4 062 80

Cat. n° 4 062 82

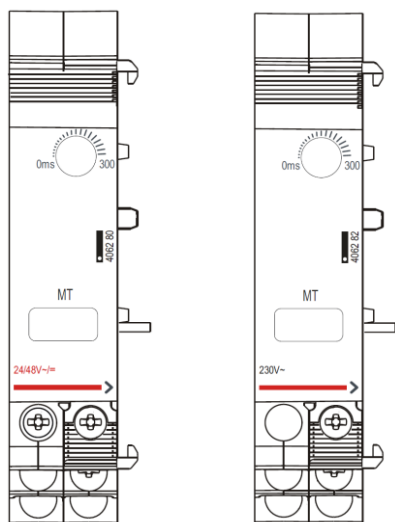

- Function name :  
MT = Undervoltage release
- Operating voltage
- Time delay setting
- Legrand reference code and Logo

### Operating voltage (Un):

- . Cat n° 406 280: 24 and 48 V ~/= (a.c. / d.c.).
- . Cat n° 406 282: 230 V~ (a.c.).

### Tripping voltage:

- . 35% of Un.

### Voltage threshold:

- . 70% of Un.

### Tripping time:

- .  $t \leq 40$  ms with the time delay setting at "0".
- .  $t = 400$  ms (+/- 50%) with the time delay setting at "300".

## 5. GENERAL CHARACTERISTICS (continued)

### Power absorbed:

- . Cat. n°4 062 80 :
  - 24 V d.c. = 0,1 W
  - 24 V a.c. = 0,1 VA
  - 48 V d.c. = 0,2 W
  - 48 V a.c. = 0,2 VA
- . Cat. n°4 062 82 :
  - 230 V a.c. = 1 VA.

### Rated impulse withstand voltage:

- . Uimp = 5kV.

### Electromagnetic compatibility:

- . Burst: 4 kV.
- . Surge 1,2/50  $\mu$ s : 4 kV differential mode and 5 kV common mode.

### Insulation voltage:

- . Ui = 500 V

### Dielectric strength:

- . 2500 V.

### Tripping force:

- . 3 Nm.

### Mechanical endurance:

- . 3 000 electrical tripping.
- . These devices support the mechanical cycles of the associated devices

### Ambient temperatures:

- . Operation: from -25°C. to +70°C
- . Storage: from -40°C. to +70°C

### Enclosure material:

- . Polycarbonate charged 10% glass fiber.
- . Characteristics of this material: self extinguishing, heat and fire resistant in accordance with standard EN 60898-1, glow-wire test at 960°C for external parts made of insulating material necessary to retain in position current-carrying parts and parts of protective circuit (650°C for all other external parts made of insulating material).

### Degree of class protection:

- . Protection index of terminals against solid and liquid bodies: IP20 (in accordance with standards IEC 529, EN 60529 and NF C 20-010).
- . Protection index of the box against solid and liquid bodies: IP40 (in accordance with standards IEC 529, EN 60529 and NF C 20-010).
- . Protection index against mechanical shocks: IK02 (in accordance with standards EN 50102 and NF C 20-015).

**5. GENERAL CHARACTERISTICS** *(continued)***Sinusoidal vibration resistance in accordance with IEC 60068-2-6:**

- . Axes: x, y, z.
- . Frequency: 5÷100 Hz ; duration 90 minutes
- . Displacement (5÷13,2 Hz) : 1mm
- . Acceleration (13,2÷100 Hz) : 0,7g (g=9,81 m/s<sup>2</sup>)

**Average weight per device:**

- . 0,063 kg.

**Volume when packed:**

- . 0,21 dm<sup>3</sup>.

**Power dissipated (W) :**

- . Cat. n° 4 062 80 :
  - 24 V ac / d.c = 0,1 W.
  - 48 V ac / d.c. = 0,2 W.
- . Cat. n° 4 062 82 :
  - 230 V a.c. = 1 VA.

**6. COMPLIANCE AND APPROVALS****In accordance with:**

- . Standards IEC/EN 23-105, EN 60439-1 (Low Voltage Directive 2006/95/EC), EN 60439-3 (Directive EMC 2004/108/EC).
- . CEE guidelines : 73/23/CEE + 93/68/CEE


**Plastic materials :**

- . Halogens-free plastic materials.
- . Marking of parts according to ISO 11469 and ISO 1043.



**Packaging:**

- . Design and manufacture of packaging in accordance with Decree 98-638 of 07.20.98 and Directive 94/62/EC



4 062 50/52/56   4 062 58/60/62   4 062 64   4 062 66   4 062 76/78   4 062 80/82   4 062 84   4 062 85   4 062 86   4 062 87

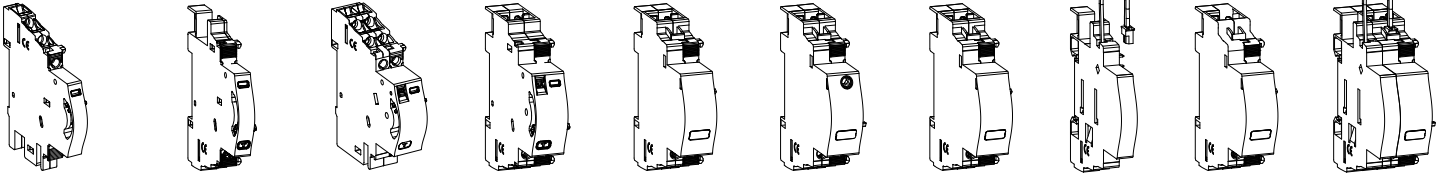



**CA** 4 062 50/58

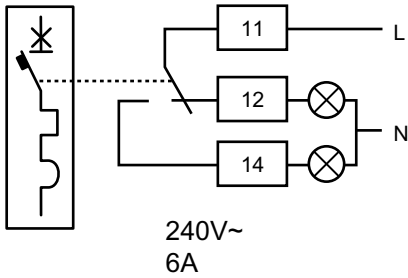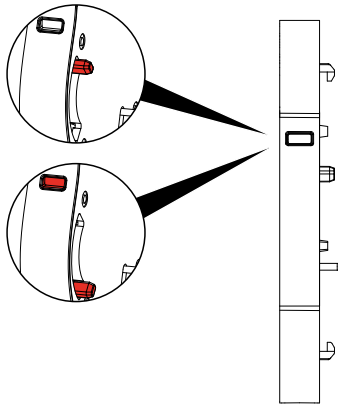



**SD** 4 062 52/60

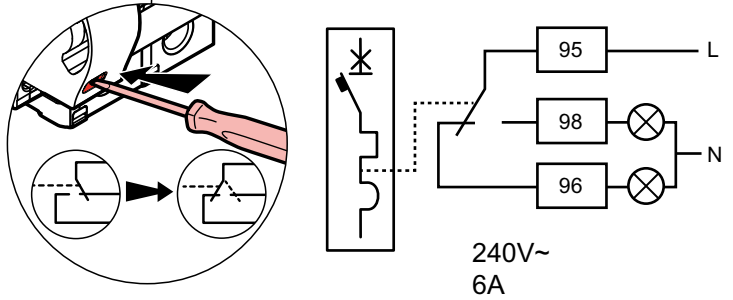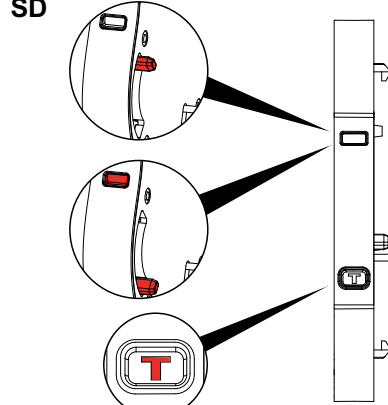

**CA/SD** 4 062 56/62

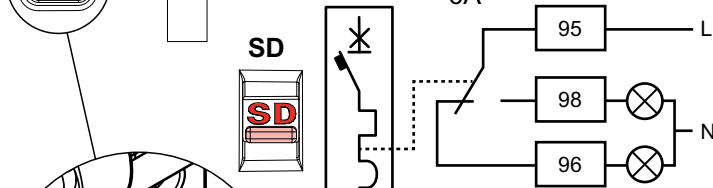
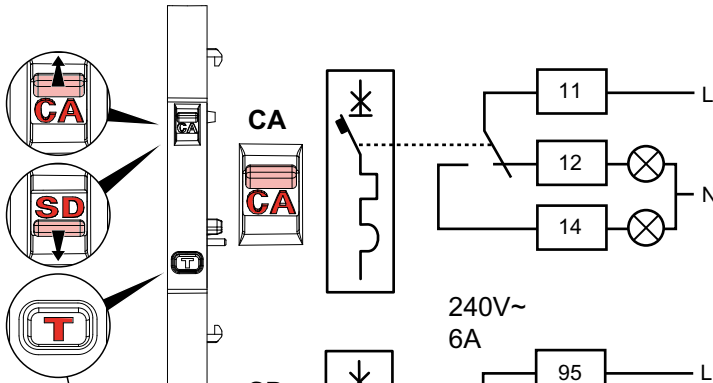


**CA+SD**  
**CA+CA** 4 062 64/66

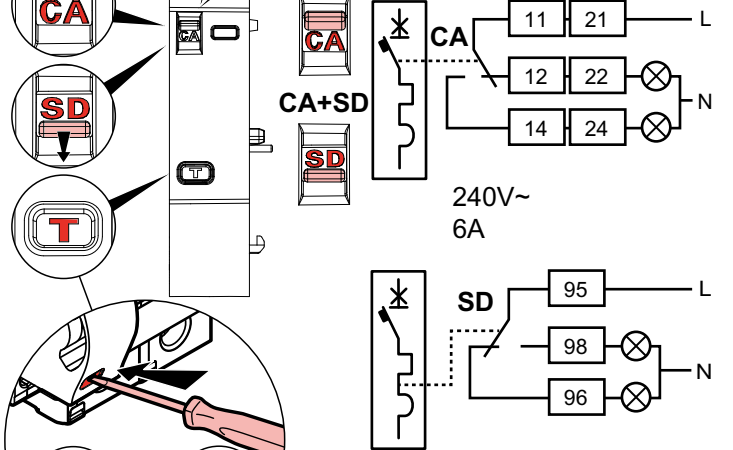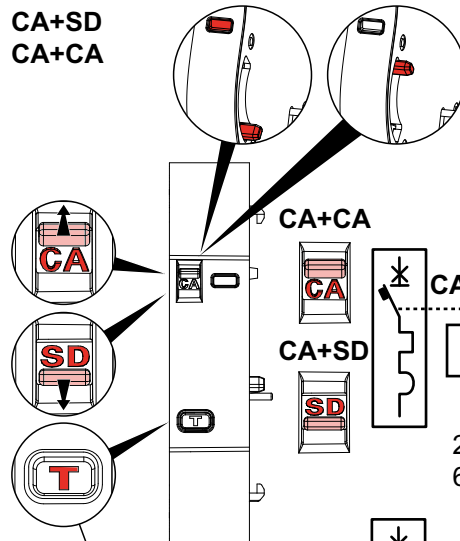



ET

4 062 76  
4 062 78

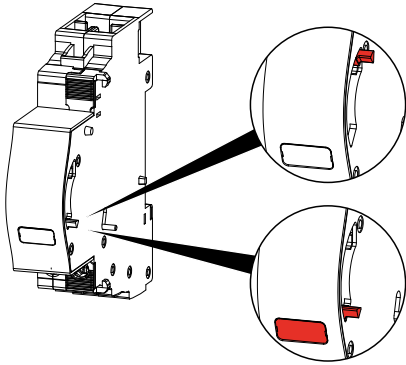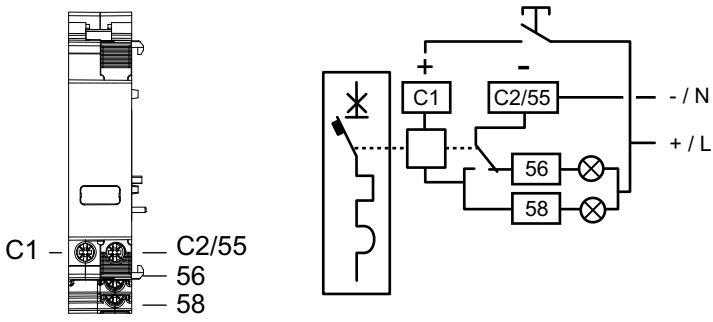


POP

4 062 86

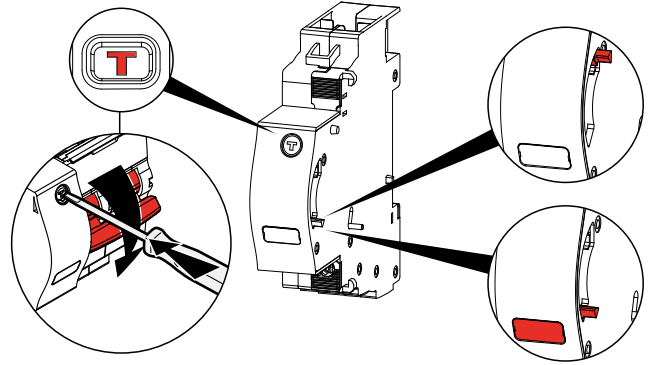
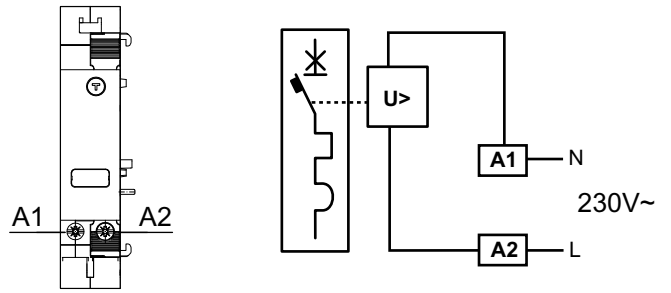


MT

4 062 80

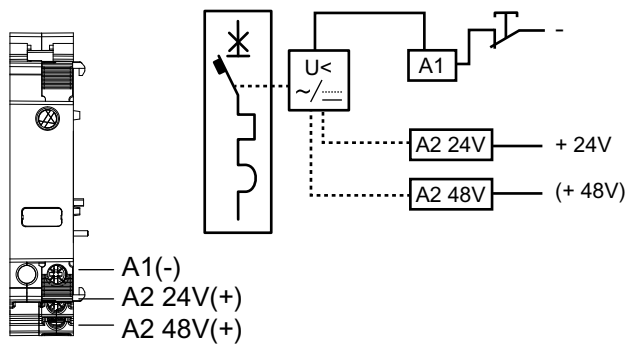


4 062 82

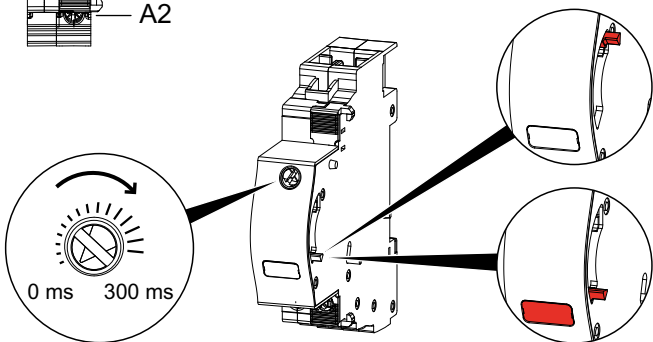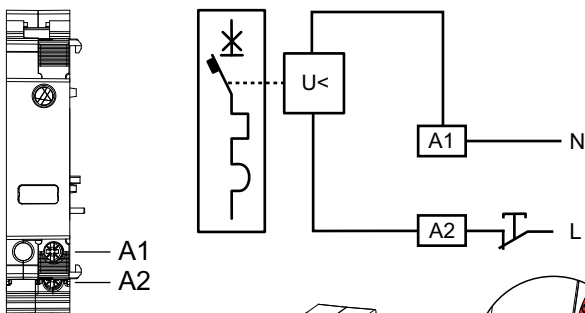


DA

4 062 84  
4 062 85  
4 062 87

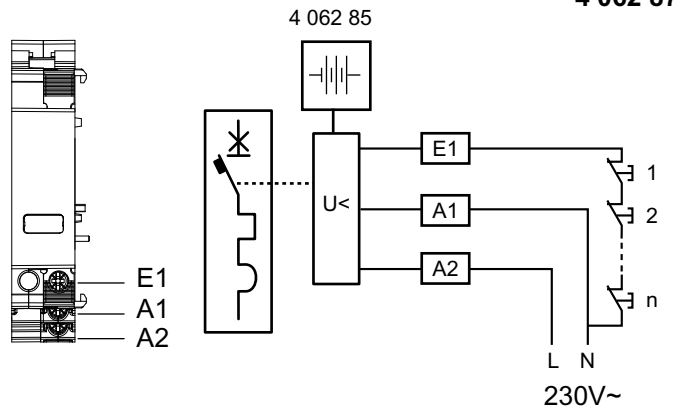


4 062 85




+




4 062 84

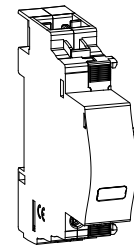

4 062 87

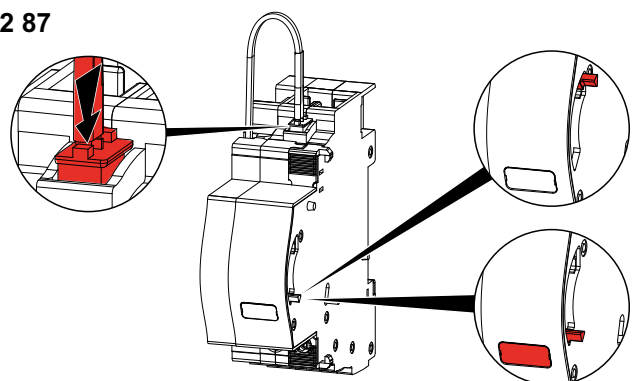



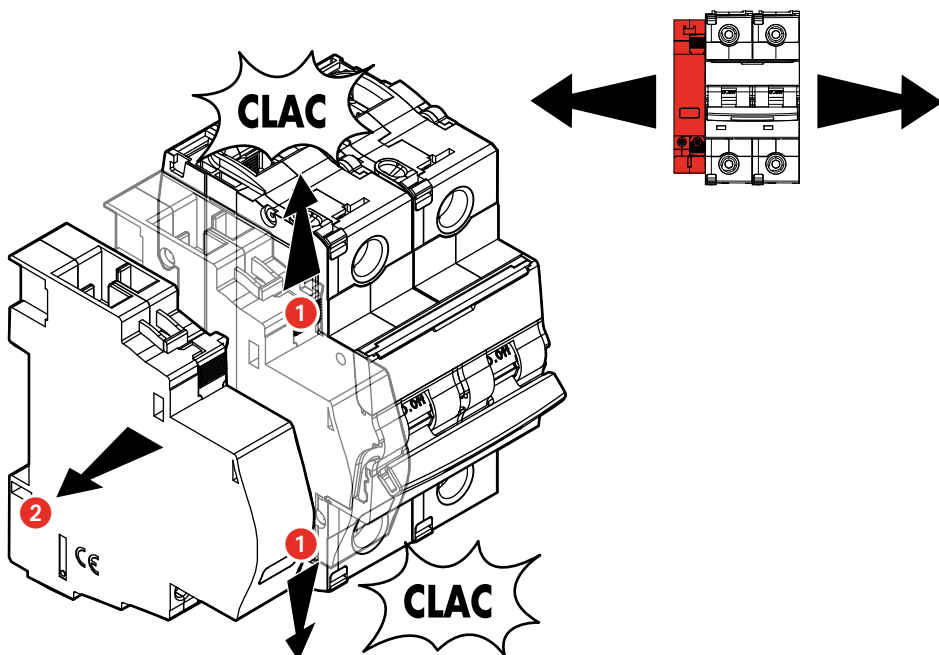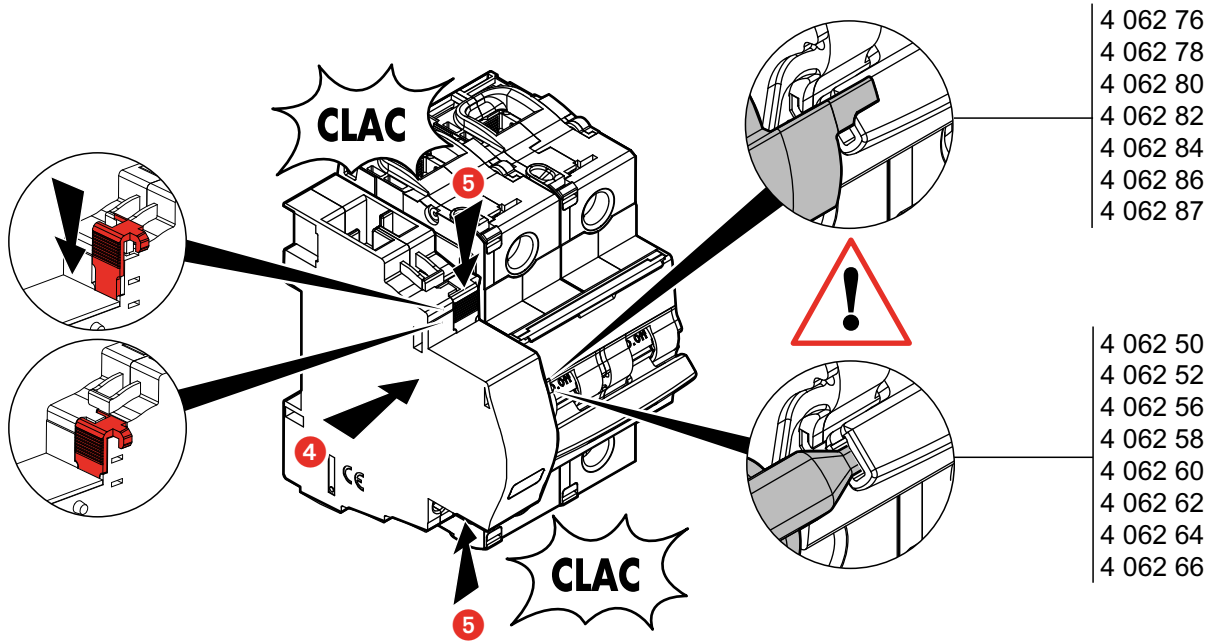
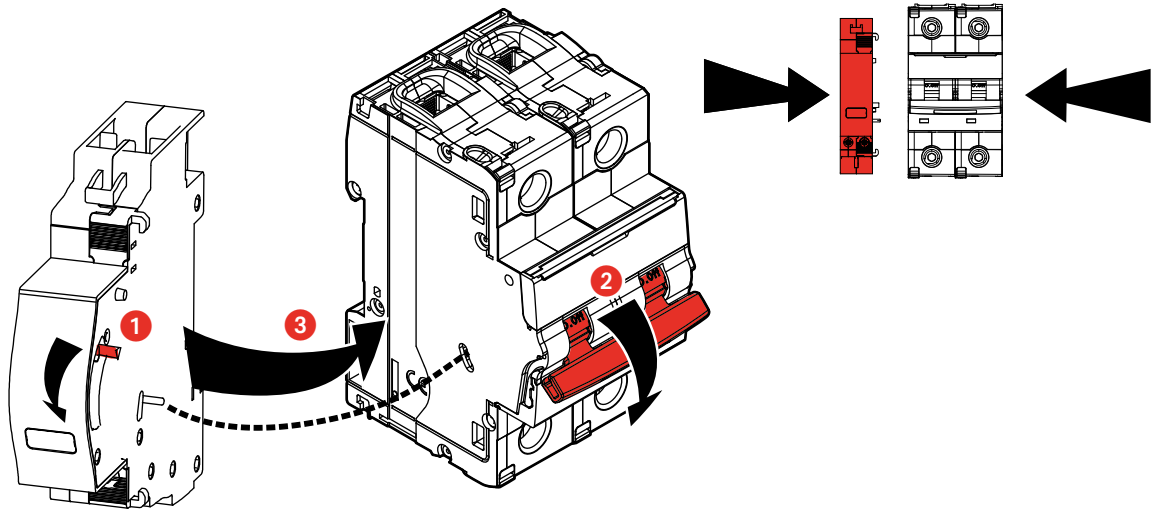


PZ 1



























1Nm  
MAX

8 mm



MAX  
2 X 1,5 mm<sup>2</sup>

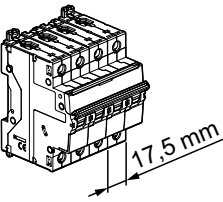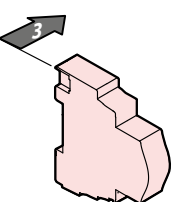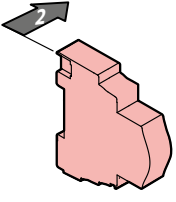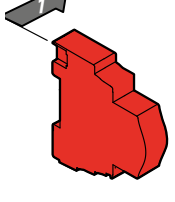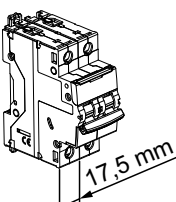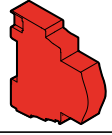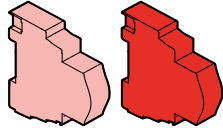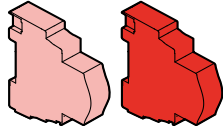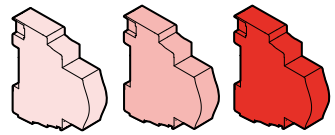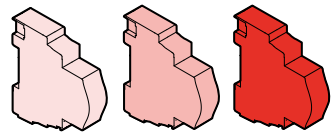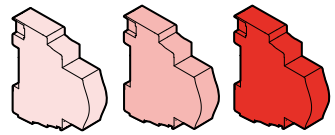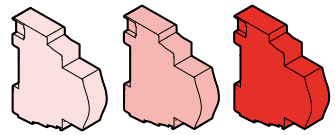				
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29

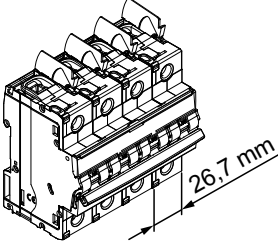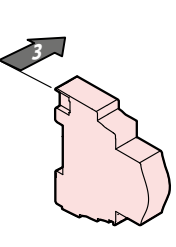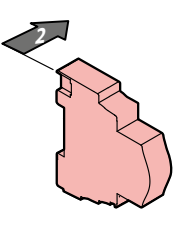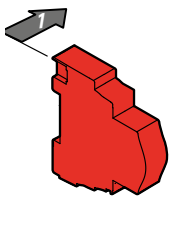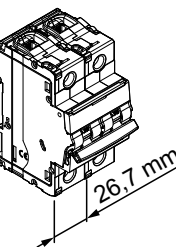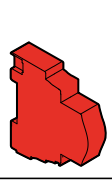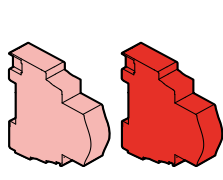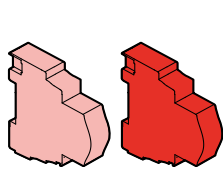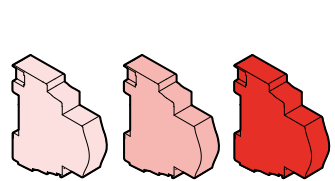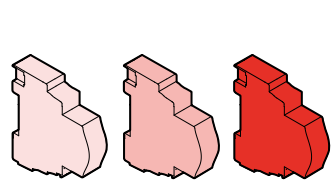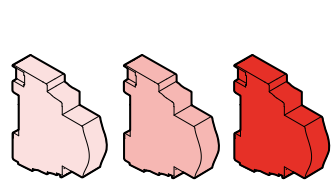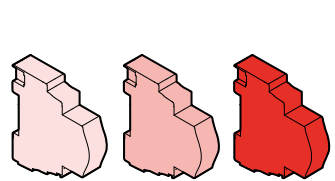				
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29
				4 062 .. 50 / 52 / 56 / 58 / 60 / 62 / 64 / 66 / 76 / 78 / 80 / 82 / 84 / 86 / 87 4 149 29

<p>Ne pas respecter strictement les conditions d'installation et d'utilisation peut entraîner des risques de choc électrique ou d'incendie.</p> <p>Door de installatie- en gebruiksvoorwaarden niet strikt na te leven, kan er gevaar voor elektrische schokken of brand ontstaan.</p> <p>The instructions for installation and use must be strictly observed in order to avoid the risk of electric shock or fire.</p> <p>Bei Nichtbeachtung der Einbau- und Nutzungsvorschriften besteht Stromschlag- bzw. Brandgefahr.</p> <p>El no cumplimiento estricto de las instrucciones de instalación y uso puede implicar riesgos de choque eléctrico o incendio.</p> <p>Il non rispetto alla lettera delle condizioni d'installazione e di utilizzo può generare rischi di scariche elettriche o di incendio.</p> <p>Não respeitar estritamente as condições de instalação e de utilização poderá provocar riscos de choque eléctrico ou de incêndio.</p> <p>Η μη αυστηρή τήρηση των συνθηκών εγκατάστασης και χρήσης μπορεί να επιφέρει κινδύνους ηλεκτροπληξίας ή πυρκαγιάς.</p> <p>Несоблюдение правил монтажа и эксплуатации может повлечь за собой риск поражения электрическим током или возникновения пожара.</p> <p>Niezastosowanie się ściśle do warunków instalacji i użytkowania może grozić porażeniem prądem lub pożarem.</p> <p>Yerleşirme ve kullanım koşullarına uyulmaması elektrik çarpması veya yangın risklerine yol açabilir.</p> <p>A beszerelési és használati feltételek szigorú betartásának elmulasztása áramütés vagy tűz kockázatával jár.</p> <p>Jos et noudata tarkasti asennus- ja käyttöohjeita, voit aiheuttaa sähköiskun vaaran tai tulipalon.</p>	<p>FR LU BE CH</p> <p>NL BE</p> <p>GB IE</p> <p>DE AT LI CH</p> <p>ES</p> <p>IT CH</p> <p>PT</p> <p>GR CY</p> <p>RU</p> <p>PL</p> <p>TR CY</p> <p>HU</p> <p>FI</p>	<p>Om installationsvilkoren inte uppfylls strikt, föreligger risk för elchocker eller brand.</p> <p>Nedodržení stanovených podmínek instalace a používání může vést k rizikům zasažení elektrickým proudem nebo požáru.</p> <p>V prípade nedodržania presných podmienok týkajúcich sa inštalácie a používania hrozí riziko úrazu elektrickým prúdom alebo vzniku požiaru.</p> <p>Neupoštjevanje vseh pogojev instalacije in uporabe lahko povzroči nevarnost električnega udara ali požara.</p> <p>Hvis installations- og brugsbetingelserne ikke strengt overholdes, kan det medføre risiko for elektrisk stød eller brand.</p> <p>Kui paigaldamis- ja kasutustingimusi ei järgita rangelt, võib see kaasa tuua elektrišoki või tulekahjuohtu.</p> <p>Precizni neievērojot uzstādīšanas un lietošanas noteikumus, pieaug elektriskās strāvas trieciena vai ugunsgrēka iespējamība.</p> <p>Tiksliai nesilaikant instalavimo ir naudojimo sąlygų gali kilti trumpojo elektros jungimo arba gaisro pavojus.</p> <p>Manglene overhold av installasjons- og bruksbetingelsene kan føre til elektrisk støt eller brann.</p> <p>Ef skilyrdum um uppsetningu og notkun er ekki vandlega fylgt kann slíkt að valda hættu á raflosti eða eldsvoða.</p> <p>Nerespectarea strictă a condițiilor de instalare și utilizare poate genera riscuri de șocuri electrice sau incendii.</p> <p>Неспазването стриктно на указанията за събляване и използване може да доведе до риск от токов удар или пожар.</p>	<p>SE</p> <p>CZ</p> <p>SK</p> <p>SI</p> <p>DK</p> <p>EE</p> <p>LV</p> <p>LT</p> <p>NO</p> <p>IS</p> <p>RO</p> <p>BG</p>