

DX³ RCD add on module with measurement & metering



DX3 time switches





Technical characteristics p. 51

Conform to IEC 60947-2
Hpi type: detect faults with AC and DC components, increased Immunity to false tripping
Inbuilt measurement/metering option
Measurement - V, A, F, PF, KWh, KVA, KVAr, THD
Metering - V, A, F, KWh
RS 485 port for remote reading
Di-electric test button inbuilt
Ergonomic test button
Scroll button for easy readings
RLCD display on front facia
For mounting on the right-hand side of 1.5 module per pole DX³ MCBs
Easy & fast association mechanism
70 sq mm terminals

Pack	Cat.Nos	Adjustable metering,	4 pole 415 V \sim
1 1	4106 57 4106 58	Nominal rating In (A) 63 A 125 A	Number of modules 7 7
1	4106 59	Adjustable measurem 125 A	ent 7



Technical characteristics **p. 54-58**


Daily and weekly time switch
Quick and easy programming due to the option to
select day blocks, day blocks can be individually set
or selected from the blocks Mon–Sun, Mon–Fri or Sat–Sun
Programming with precision to the second
Switch times visible in weekly overview on display

stro
ctric of the
witching ched ixed
nrise/ tion or
itional
etric of the switch ched ixed nrise tion



programmable time switches

with analogue and digital dial

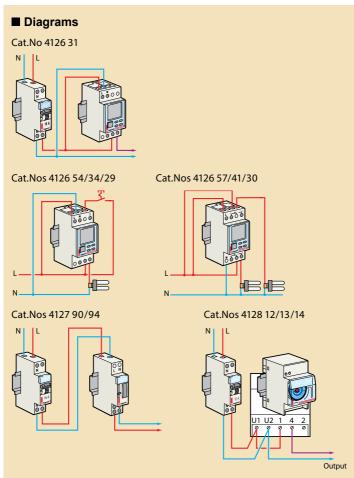

Output closing and breaking times are calculated based on the date, the actual time when the device was switched and on geographical coordinates of the actual location



AlphaRex ³ digital time switches


■ Technical specifications

Туре	AlphaRex³ D21	AlphaRex ³ D22	AlphaRex³ D21s	AlphaRex ³ D21 astro	AlphaRex ³ D22 astro	AlphaRex ³ DY21	AlphaRex ³ DY22		
Nominal voltage 230 V 50/60 Hz	4126 31	4126 41	4126 34	4126 54	4126 57	4126 29	4126 30		
Number of modules of 17.5 mm each	2	2	2	2	2	2	2		
Number of channels	1	2	1	1	2	1	2		
Switch output	1 changeover contact	2 changeover contacts	1 changeover contact	1 changeover contact	2 changeover contacts	1 changeover contact	2 changeover contacts		
Zero-crossing switching	✓	✓	✓	✓	✓	✓	✓		
Switching capacity									
• Ohmic 250 V± cos = 1	16 A ±	16 A ±	16 A ±	16 A ±	16 A ±	16 A ±	16 A ±		
· Inductive 230 V± cos = 0.6	10 A ±	10 A ±	10 A ±	10 A ±	10 A ±	10 A ±	10 A ±		
Incandescent lamp load	2000 W	2000 W	2000 W	2000 W	2000 W	2000 W	2000 W		
Fluorescent lamp, series compensated	2000 VA	2000 VA	2000 VA	2000 VA	2000 VA	2000 VA	2000 VA		
Energy-saving lamp	1000 W	1000 W	1000 W	1000 W	1000 W	1000 W	1000 W		
Programs ¹⁾	56	28 per channel	56	56	28 per channel	84	84 per channel		
Control input with switch-off delay 0 s to 23 h 59 min 59 s			✓	✓		✓			
Cycle function (pulse time) min. 1 s, max. 1 h 59 min 59 s	✓	✓	✓	✓	✓	✓	✓		
Clock precision (typical)	± 0.1 s/day ²⁾								
Running reserve	5 years								
Shortest switching step	1s								
Operating temperature	−20 to +55 °C								
Degree of protection	IP20								

¹⁾ A program consists of a switch-on time, a switch-off time as well as days or day blocks which are assigned as "switched-on" or "switched-off"


■ Connection diagram

AlphaRex³ D21





AlphaRex³ D21s AlphaRex³ D21 astro AlphaRex³ DY21



■ Functions

Text guidance

Set language

Select menu, go back while in menu Press > 1 sec. = operating display

OK Confirm the selection or accept the parameter

Select the menu item or set the parameter; for 2-channel time switches, can be used to select the channel (channel 1 – channel 2)

■ Brief description of programming functions

Guides the user through programming and setup with plain text prompts. Each step can be read on the screen, and the function that is

Reset

Simultaneously pressing all buttons for more than 2 seconds deletes all data. Language, date/time, summer time (daylight saving time) and switch times must be set again.

■ Data key

If the supply voltage is switched on, the "KEY – READ – WRITE" menu item is automatically opened when a data key is inserted. "WRITE": Program data is written from the time switch to the key. Caution: Any data present on the key will be overwritten. "READ": Program data is written from the key to the time switch; any switching programs on the time switch are overwritten. Only one master switching program, which consists of multiple switching programs, can be saved on the time switch or on the key at a time. If the supply voltage is not connected, the "KEY – READ – WRITE" menu item is not automatically opened when a data key is inserted. The "KEY" function can still be selected from the menu even if the supply voltage is not connected.

operation easy even in poorly lit environments. menu even if the

The language selection function can be accessed using the "MENU" button. The language is set to English by default.
The following languages can be selected: German, English, French, Italian, Spanish, Dutch, Portuguese*, Swedish*, Norwegian*, Finnish*, Danish*, Polish*, Czech*, Russian*, Turkish*.

currently active flashes. An integrated display and button light makes

*) Excluding AstroRex DY64

Time, date, summer time (daylight saving time)

The time switch is preset at the factory to the current time and date. The time can be changed by selecting "MENU" + "SET".

■ PC programming

In addition to the easy, text-guided programming directly on the time switch, switching programs can also be created on a PC with the software program from Legrand and transferred to the time switch using a data key. A data transfer device (Cat.No: 4128 73) is required to transfer switching programs created on a PC to the data key. The device is connected to the PC using the USB plug. In addition to the data transfer device, we also offer a CD with the software and the necessary drivers. PC system requirements: USB port; Windows * XP, Windows * Vista, Windows * 7; approx. 40 MB of free memory.

²⁾ Can be set to mains-synchronous operation



AlphaRex ³ digital time switches

■ Brief description of programming functions

Weekly programs

To create a weekly program, select "MENU", "PROGRAM", and then "CREATE" to easily enter programs which are repeated on a weekly basis. A weekly program consists of a switch-on/switch-off times and days which are assigned as "switched-on" or "switched-off". The following predefined blocks can be selected: "MONDAY – SUNDAY", "MONDAY – FRIDAY"

1) or "SATURDAY – SUNDAY", 1); the assigned days of the week are fixed. The switch-on/switch-off times must be entered. The user can also set custom day blocks. By selecting "CUSTOM", switch times can be freely assigned to any days of the week. This option also allows the user to set switch times at midnight.

1) Excluding AlphaRex DY, AstroRex DY64

Yearly programs [AlphaRex³ DY21, AlphaRex³ DY22]

This menu item allows the user to enter (additional) yearly programs, which are only executed within a defined validity period. They can overlap with one another and with the weekly programs on the same channel based on an "OR" connective. The validity period is defined by entering the start date (at 00:00:00) and the end date (at 24:00:00). The start date must be entered before the end date. With the "EVERY YEAR" option, the additional switch times have the same validity period each year (Christmas, national holidays, birthdays, etc.) Select the "ONCE" option when additional switch times are needed within a validity period (e.g. during holidays), but the start/end dates of the holiday period change from year to year.

Special programs (priority program) [AlphaRex³ DY21, AlphaRex³ DY22]

Weekly and yearly programs on the same channel are not executed during the validity period of a special program. However, other special programs can be executed during the validity period. Different special programs can overlap with each other based on an "OR" connective. With the "EVERY YEAR" option, the additional switch times have the same validity period each year (Christmas, national holidays, birthdays, etc.). Select the "ONCE" option when additional switch times are needed within a validity period (e.g. during holidays), but the start/end dates of the holiday period change from year to year. Additional options include "MON TO SUN"/"CUSTOM": the respective channel only switches according to the special program; "PROG ON"/"PROG OFF": the respective channel is switched on/off during this time period.

■ Basic functions for "astro"

Location (astro) [AlphaRex³ D21 astro, AlphaRex³ D22 astro, AlphaRex³ DY21, AlphaRex³ DY22]


The sunrise/sunset times, which change daily, are calculated for the location programmed in the AlphaRex. The unit is delivered with the location set to "GERMANY – SOEST" by default. Enter the actual location for optimal operation. This can be done in two ways. Select "MENU", "SET" and "ASTRO" to access the two options "LOCATION" and "COORDINATES". "LOCATION": With this menu item, the user can select the country and city which is closest to the site of operation. "COORDINATES": Alternatively, the user can select this menu item to set the geographical coordinates of the location. The longitude and latitude values are entered in degrees or degrees and arcminutes

2) (precision can be set in expert mode). Information on coordinates and time zones can be found in the time zone map included with every time switch.

Offset


By selecting "MENU", "SET", "ASTRO" and "OFFSET", time differentials can be set for the calculated switch times. This can be done in two ways: time offset or angle offset.

In <u>time offset</u>, a time differential can be entered to shift the switch time by up to +/- 120 min relative to the sunrise/sunset times. In <u>angle offset</u>, a value can be entered in degrees and arcminutes to shift the switch time by up to +/- 12° 00′ relative to the sunrise/sunset times. The time differentials are set separately for sunrise and sunset using the menu items "SUNSET" (opens the screen for setting the sunset offset) and "SUNRISE" (opens the screen for setting the sunrise offset).



Example:

For a time differential of +30 min, the time switch switches 30 min. after sunrise and 30 min. after sunset. For a time differential of -30 min, the time switch switches 30 min. before sunrise and 30 min. before sunset.



Note:

If the offset is set in degrees, the time switch always switches at points when the brightness is the same, despite the fact that the twilight duration changes over the course of the year. Sunrise and sunset correspond to -50' for the centre of the sun (the edge of the sun is visible on the horizon).

Offset correction function 2)

Select "MENU", "SET", "ASTRO" and "CORRECTION" to set a time correction for the 6-month periods surrounding summer and winter. The time correction is set to 0 min. by default and can be set from 1 min. up to 30 min. The time correction for sunset is entered in the "SUNSET" menu item. The time correction for sunrise is set in the "SUNRISE" menu item. The correction function overlaps with the calculated astronomical switch times, including the offset settings.

Example

Setting a time correction extends the daily switched-on time by up to 60 min. in the middle of the six winter months (switches off up to 30 min. later in the morning and switches on up to 30 min. earlier in the evening). In the middle of the six summer months, the time correction reduces the daily switched-on time by up to 60 min. (switches off up to 30 min. earlier in the morning and switches on up to 30 min. later in the evening). The time correction varies continuously between the two max. values during the rest of the year.

Basic settings using a PC and day key

All of the basic settings described above, with the exception of the current time and date, can be set up using the AlphaSoft software from Legrand and imported to the time switch using the data key.

2) Excluding AstroRex DY64



AlphaRex ³ digital time switches

■ Additional functions

Relay function

The relay state can be changed by selecting "MENU" and "FUNCTIONS". The relay is preset to the "AUTO" function; the time switch switches at the programmed times. The following can also be selected: "ALWAYS ON", "ALWAYS OFF" and "EXTRA". If "EXTRA" is selected, the switching status specified by the program is inverted. The time switch resumes switching according to the programmed switch times after the next switch command.

Holiday program

In holiday program, the holiday period is set with a start and an end date. It can be activated with the "ACTIVE" program item and deactivated with "PASSIVE". If the holiday program is activated, the time switch does not carry out any programmed switch commands during this time period. Instead, it remains "ALWAYS OFF" or "ALWAYS ON" during the holiday period, as requested. When the holiday period has ended, the time switch resumes switching according to the programmed switch times.

1 h tost

The "1 h TEST" function can be used for a switching simulation. If "1 h TEST" is activated, the switch outputs are switched for one hour. After the time has ended, the time switch resumes switching according to the programmed switch times.

PIN code

Input and programming can be locked using a four-digit "PIN CODE". The time switch can be unlocked using the "PIN CODE". The time switch can also be unlocked using the "RESET" function, which also deletes all settings and programs.

Operating hours counter

This function displays the time for which the relay has been switched on and the date of the last reset. Counting range: 65,535 h.

Contrast adjustment

This function allows the user to adjust the display contrast.

Expert mode*

Expert mode is activated by selecting "OPTIONS" and "EXPERT". After expert mode is activated, the following additional functions can be used: control input "extra" 1, control input "out" 1, cycle function, channel-switching function (2-channel time switches), mains-synchronous operation, offset correction function 2, geographical coordinates in degrees and arcminutes 1, AlphaRex 3 D21s, AlphaRex 3 D21 astro, D21 astro, D21 astro, D22 astro, D22 astro, D23 as

Control input with switch-off delay

Adjustable switch-off delay via control input. The control input enables an additional switching of the relay, parallel to the switching program. The switch-off delay can be set from 0 s to 23 h 59 min 59 s. The switch-off delay begins as soon as the voltage is removed from the control input.

Control input "extra"*

Override of switching state via control input. If the "EXTRA" function is activated, the switching state specified by the program is inverted. The time switch resumes switching according to the programmed switch times after the next switch command. The "EXTRA" function is ended prematurely if the button is pressed again or if a pulse is received at the control input.

Control input "off"

Switch off via control input. Activating the "OFF" function causes the time switch to be switched off via the control input. The "OFF" function is ended if the button is pressed again or if a pulse is received at the control input. The time switch resumes switching on/off according to the programmed switch times.

Pulse function

Programmable with precision to the second.

Cycle function

Function for cyclical switching. With this function, the time switch is switched on once within a defined time period and for a defined duration. The cycle time can be set between 2 s and 2 h. The switch-on time can be set between 1 s and 1 h 59 min 59 s.

	Min.	Max.
Cycle	2 s	2 h
Switch-on time	1 s	1 h 59 min 59 s



Random function

If the random function is activated, set switch times are randomly shifted within a range of +/- 15 minutes.

Channel-switching function*

With 2-channel time switches, this function can be activated so that the time switch regularly switches between the outputs assigned to the channels, in order to protect connected devices (for example lights/lamps) or so that two devices can be used simultaneously. The channel-switching function is activated by selecting "MENU", "OPTIONS" and "CHANNEL 1<>2". The time switch switches between the outputs according to whether the menu item "DAILY" (once per day at 12:00 p.m.) or "WEEKLY" (once per week on Sunday at 12:00 p.m.) is selected.

Mains-synchronous operation

Mains-synchronised clock precision. By activating the "SYNC" function and then "ACTIVE", the quartz-controlled time switch becomes a synchronous time switch.

*) Excluding AstroRex DY64



Rex analogue time switches daily/weekly time switches


■ Technical specifications

Туре	MicroRex T31	MicroRex QT31	MicroRex W31	MicroRex QT11	MicroRex QW11	
Number of modules of 17.5 mm each	3	1				
Number of channels	1	1	1	1	1	
Drive type	synchronous	quartz	synchronous	quartz	quartz	
Switching dial	24 h	24 h	7 days	24 h	7 days	
Running reserve	none	100 h	none	100 h	100 h	
Switching increment	15 min	15 min	2 h	15 min	2 h	
Shortest switching step	30 min	30 min	4 h	15 min	2 h	
Switching step	+/- 5 min	+/- 5 min	+/- 30 min	+/- 5 min	+/- 30 min	
Clock precision	mains	2.5 s/day	mains	2.5 s/day	2.5 s/day	
	synchronised			synchronised		
Switching capacity						
• Ohmic 230 V± cos = 1	16 A ±					
Incandescent lamp 230 V±	4 A ±					
• Inductive 230 V± cos = 0.6	12 A ±					
Switch output	1 changeover contact	1 changeover contact	1 changeover contact	1 normally open contact	1 normally open contact	
Operating temperature	-10 to +55 °C					
Degree of protection	IP20					


MicroRex - 1 module

■ Connection diagram

MicroRex - 3 modules

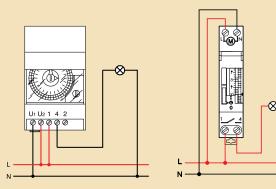


Wall bracket - 3 modules

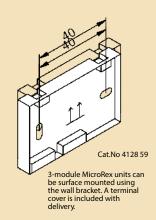

■ Standard light sensitive switch (Cat.No 4126 23)


Switch "ON" and "OFF" defined by a light level threshold





programmable time switches


with analogue and digital dial

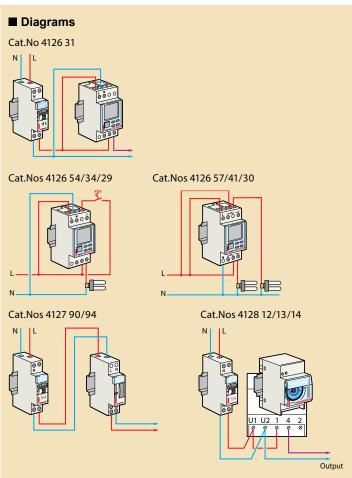


Output closing and breaking times are calculated based on the date, the actual time when the device was switched and on geographical coordinates of the actual location



Dimensions of din-rail equipment

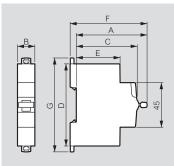

	Α	В				С	D	Е	F	G	
Product		1P	1P+ N	2P	3P	4P					
RX ³ MCBs	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
RX ³ RCCBs	71.7		00.1	35.6	00.1	71.2	61	83	44	77.8	88.9
TX ³ MCBs	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	88.9
TX ³ RCCBs	71.7			35.6		71.2	61	83	44	77.8	88.9
Isolating switches DX ³	71.7	17.8		17.8/ 35.4	35.6/ 53.1	35.6/ 70.8	61	83	44	77.8	94.8
Remote trip head isolating switches DX³ up to 63A - 1 mod/pole	71.7			35.4	53.1	70.8	61	83	44	77.9	94.8
Remote trip head isolating switches DX ³ 100/125A - 1.5 mod/pole	73				80.1	106.8	61	96	47	79	104.3
DX ³ RCCBs	71.7			35.6		71.2	61	83	44	77.8	94.8
1P DX ³ RCBOs (up to 45A)	68	17.7					60	115	48	74	126.8
1P+N DX ³ RCBOs (up to 40A) & 4P (up to 32A)	71.7		35.6			71.2	61	83	44	77.8	94.8
2P & 4P DX ³ RCBOs (40A to 63A)	72			71.2		124.6	61	96	44	78.2	107.8
1P+N DX ³ MCBs 1 mod	71.7		17.8				61	83	44	77.8	94.8
DX ³ MCBs - 1 mod/pole	71.7	17.7	35.4	35.4	53.1	70.8	61	83	44	77.8	94.8
DX ³ MCBs - 1,5 mod/pole	73.1	26.7		53.4	80.1	106.8	61	100	47	79	104.3
DX ³ add-on modules up to 63A - 1 mod/pole	72			35.6	53.4	53.4	61	96	44	78.2	107.8
DX ³ add-on modules up to 63A - 1.5 mod/pole	72			35.6	53.4	53.4	61	96	47	78.2	116.7
DX ³ add-on modules 80 to 125A - 1.5 mod/pole	72			71.2	106.8	106.8	61	114	47	78.2	129
DX ³ auxiliaries	71.5	8.8 / 17.7			61	83	44	77.7	84.5		
DX³ remote control	74.3		17	.7 / 35	5.4		61	83	44	80.5	98.8
DX ³ Stop&Go automatic resetting	74.3			35.4			61	83	44	80.5	113.7
Change-over switches	68	17.7		35.6			60	83	44	74	94
CX ³ latching relays	64	17.8		17.8	35.6	35.6	61	84.5	44	70.2	94.8
CX³ contactors up to 25A	66.3/ 61	17.8		17.8	35.6	35.6	61	84.5	44	72.6/ 67.3	94.8
CX³ contactors 40A & 63A	62			35.6	53.4	53.4	60	83	44	68	94
Auxiliaries for CX³ contactors and latching relays	61	9/17.8			61	84.5	44	67	84.5		
Push-buttons / control switches	68	17.7			60	83	44	74	94		
Indicators	68	17.7			60	83	44	69	94		
Bells and buzzers	60	17.7			60	76	44	66	85		
Light sensitive switches											
Cat.Nos 0 037 21, 4 126 23	60	35.6			60	85	37.5	66	70		
Socket outlets	60	44.5			60	83	44	66	92		
Time delay relays	60	17.7			60	83	44	66	94		
Remote control dimmers											
Cat.No 0 036 58	60	36			60	83	44	66	94		
Cat.No 0 036 60	60			72			60	83	44	66	94
Cat.No 0 036 71	60	108					60	83	44	66	94

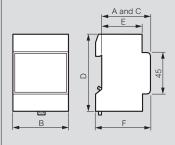

Description		Α	В	С	D	E	F
Programmable	0 037 05	60	17.8	60	83	44	66
time switches	4 127 80/90/94	60	17.8	60	83	44	66
	4 127 95, 4 128 12/13	60	53	60	83	44	66
	4 126 31/33/41	60	35.6	60	83	44	66
	4 126 54/57	60	35.6	60	83	44	66
	0 047 70	60	90	60	83	44	66
Transformers and power supplies							
	0 042 10/30/31	60	72	60	83	44	66
	4 130 91	60	35.8	60	83.5	44	66
	4 130 92/93/96	60	71.5	60	83.5	44	66
	4 130 98	60	89	60	94	44	66
	0 047 91/92	60	105	60	95	44	66
	4 131 05/06/07/08	60	89	60	95	44	66
	0 047 93	60	70	60	95	44	66
Residual current relay							
	0 260 88	60	35.5	60	89	44	66